

Handi-Spa Pad Installation Instructions

To make an 8' x 8' square pad you need 2 cartons (6 pads).

To make an 8' x 12' rectangular pad you need 3 cartons (9 pads).

To make a 10'-8" x 12' rectangular pad you need 4 cartons (12 pads).

The Handi-Spa Pad is an all-plastic pad, measuring 32" x 48", that can be connected together, with the supplied connectors, in any configuration to form a flat platform for placement of a spa. Installation is easy.

The Handi-Spa Pad can be drilled through to run electrical conduit if needed.

Tools Required: Shovel, Level, 2x4

Also required: Sand – approximately 80 lbs required for each pad for a 1" layer.

Place the Handi-Spa Pad on any level, well-drained surface. It can also be installed under spas on existing decks or concrete pads to help improve the insulation factor.


Start the installation by removing any sod and leveling out the dirt surface. A long (8ft) wooden 2x4 is a handy tool to use along with your level. After leveling tamp the dirt down to form a firm base.

To help assist the leveling process a 1" to 2" layer of sand or fine gravel should be installed next. Use the long 2x4 and a level to get the sand as level as possible. Tamp the sand down to form a firm base.

Note that the spa pads are placed "waffle" side down on the ground and no connectors are needed between pads #2 and #5. Remove the connectors, which are located in the pockets in the back of each pad. **The end of each connector marked "A" must go in the corresponding "A" Slots.** Start with one of the pads and snap four of the connectors into the slots marked "A". Referencing the diagram below place the pad into position #1. Take a second pad and snap two of the connectors into the side "A" slots. Connect pad #2 to pad #1. Take a third pad and snap two connectors into the end "A" slots. Connect pad #3 to pad #2. Take a fourth pad and snap two connectors into the side "A" slots. Connect pad #4 to pad #1. Take a fifth pad and snap two connectors into the side "A" slots. Connect pad #5 to pad #4. Lastly connect pad #6 to both pads #3 and #5. Note: The "A" slots are tighter and will help to keep the connectors in place. It may be necessary to use a hammer or mallet to snap the connectors into the "A" slots.

Once installation of the pads is complete, lower the spa carefully onto the pads to avoid moving them.

Made in USA by:
Confer Plastics, Inc.
97 Witmer Road
North Tonawanda NY 14120
www.conferladders.com
800-635-3213
Fax 716-694-3102
e-mail: ladders@conferplastics.com

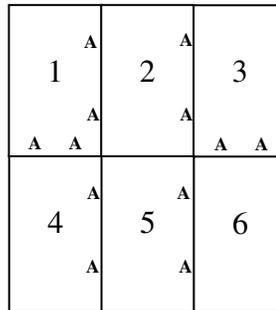

Warranty: The Handi-Spa Pad is warranted by the manufacturer to be free from manufacturing defects for a period of one (1) year from date of purchase.